



TUTORIAL 2D REINFORCEMENT

All information in this document is subject to modification without prior notice. No part of this manual may be reproduced, stored in a database or retrieval system or published, in any form or in any way, electronically, mechanically, by print, photo print, microfilm or any other means without prior written permission from the publisher. SCIA is not responsible for any direct or indirect damage because of imperfections in the documentation and/or the software.

© Copyright 2024 SCIA nv. All rights reserved.

Table of Contents

Table of Contents	3
Introduction	4
Theoretical reinforcement	5
Configuration	5
Longitudinal reinforcement	6
Practical reinforcement	7
Example	.11
Theoretical reinforcement	11
Practical reinforcement	15
Input practical reinforcement	15

Introduction

SCIA Engineer allows you to model and check concrete 2D elements. To be able to pass these checks, reinforcement is needed. In SCIA Engineer there are different types of reinforcement:

- Theoretical reinforcement
 - o Required reinforcement
 - Provided reinforcement
- Practical/User reinforcement

This tutorial will explain the different types of reinforcement and discuss an example on how to input or calculate these types to be able to perform the concrete 2D checks.

Theoretical reinforcement

Configuration

The theoretical reinforcement is calculated out of the recalculated internal forces. It gives the amount of reinforcement needed to resist the internal forces induced by ULS loads. Since there are several workflows possible to design concrete 2D elements, the theoretical reinforcement design is not mandatory to perform. Experienced users can directly jump to practical reinforcement to perform the checks on, but this theoretical approach gives a good idea of how much practical reinforcement is going to be needed. There are two types of theoretical reinforcement:

- **Required reinforcement**: The required reinforcement is a value of the reinforcement that is necessary in every mesh element of the 2D element.
- **Provided reinforcement:** The provided reinforcement is a template added to each wall/slab consisting of basic and additional reinforcement.

The configuration of theoretical reinforcement can be found in the Concrete settings under Design defaults



For the calculation of the reinforcement an effective depth is needed which is based on diameter and cover. The concrete cover and diameter can be set separately for both the upper and lower face of the slab. For walls there is only one setting available that is applied to both sides.

Concre	te se	ttings	5									- 0	×
Views:	Des	sign d	defaults 👻 View settings 💌 Load defa	ault	Find						Nationa	al annex: 🔫	
D	escri	ption		Symbol	Value		Default	Unit	Chapter	Code	Structu	CheckT	
<all></all>			Q	<all></all>	Q <all></all>	P	<all></all>	Q ~>C	<all> \wp</all>	<all></all>	<all> 🔎</all>	Design $ imes$	
⊿ D	esigr	n de fa	aults										1
	Re	infor	cement										
	⊳	Bear	m / Rib										
	⊳	Bear	m slab										
	⊳	Colu	umn										
		Plat	te										
		- L	Longitudinal										
			Design of provided reinforcement							Independent	Plate,Sh	Design d	
			 Upper (z+) 										
			Type of cover	Type _{c+}	Auto		Auto		4.4.1	EN 1992-1-1	Plate,Sh	Design d	>>
			Diameter of first layer	d _{s1+}	10,0		10,0	mm		EN 1992-1-1	Plate,Sh	Design d	
			Angle of first layer direction	α ₁₊	0,00		0,00	deg		EN 1992-1-1	Plate,Sh	Design d	
			Diameter of second layer	d _{s2+}	10,0		10,0	mm		EN 1992-1-1	Plate,Sh	Design d	
			Angle of second layer direction	α ₂₊	90,00		90,00	deg		EN 1992-1-1	Plate,Sh	Design d	
			Lower (z-)										
			Type of cover	Type _{c-}	Auto		Auto	_	4.4.1	EN 1992-1-1	Plate,Sh	Design d	
			Diameter of first layer	d _{s1-}	10,0		10,0	mm		EN 1992-1-1	Plate,Sh	Design d	
			Angle of first layer direction	α ₁₋	0,00		0,00	deg		EN 1992-1-1	Plate,Sh	Design d	
			Diameter of second layer	d _{s2-}	10,0		10,0	mm		EN 1992-1-1	Plate,Sh	Design d	
		_	Angle of second layer direction	a ₂₋	90,00		90,00	deg		EN 1992-1-1	Plate,Sh	Design d	
		- S	Shear										
			Diameter of shear reinforcement		8,0		8,0	mm		EN 1992-1-1	Plate,Sh	Design d	
											O		ancel

If you enable provided reinforcement you're allowed to create or chose a template of reinforcement. The calculation will still be based on the chosen diameters and covers but Scia is going to compare them with the settings in the template to see if this chosen reinforcement is sufficient.

Pla	ate				
	Lo	ngitudinal			
		Design of provided reinforcement			
		Design template of provided reinforcement	Plate, S	Plate_Ba	

This template exists of basic and additional reinforcement. For 2D elements no template settings can be made for shear reinforcement so this part will remain 'Required reinforcement'.

Longitudinal reinforcement

The basic reinforcement is present along the whole area of the slab while the additional reinforcement is added only in zones where basic reinforcement is not sufficient to withstand (recalculated) internal forces. A choice can be made to sort the additional reinforcement by minimal area, minimal diameter or maximal spacing. SCIA Engineer uses the least amount of necessary additional bars or places the maximum setting from the template whenever this template is still not sufficient to resist the (recalculated) internal forces.



Practical reinforcement

We will now pass on to the level of practical reinforcement. This will allow us to specify the reinforcement locally over a 2D element.

In the theoretical reinforcement design, we have calculated where reinforcement is needed. We can now manually input practical reinforcement in these areas by typing '2D reinforcement' in the SCIA Spotlight and selecting a 2D element:

2D reinforcement	⊘ ⊗
2D reinforcement	
ULS & SLS 2D reinforcement design	
2D reinforcement mesh	
Explode 1D or 2D reinforcement int	

After this we need to provide information of the reinforcement we want to define:

Reinforcement 2D			×
	Name	RR1	
	2D member	Slab 2	
/ / / / //	A Reinforcement		
	Туре	Bars	*
	Material	B 500B	·
	Surface	Lower	*
	Number of directions	1	٣
	Angle of first direction [deg]	0,00	
	Diameter (dl) [mm]	16,0	
	Concrete cover (cl,cu) [mm]	30	
	Offset [mm]	0	
	Bar distance (sl) [mm]	100	
	Reinf. area [mm^2/m]	2011	
sl sl ødl	Total weight [kg]	0,00	
	4 Geometry		
	Geometry defined by	Polygon	*
	Actions		
		Load from setup >>	*>
		OKCano	el "



Next, on the 2D element you have chosen, you draw the region in which the defined reinforcement needs to be applied:



Check / Uncheck group	Lock position
) 🗖 😬 🔺 🖳 🦷	- 🔛 🧐 💯 🔍 🕒
Check / Uncheck all	
+ Service	
Concrete + reinforcement	
Display	
Member data	
SaT detail data	
Drawing directions for design	
Color of reinforcement	colour by layers 📃 💌
Reinforcement drawing type	3D 🗸
Rounded bends	
+ Concrete labels	
Reinforcement regions 2D	
Display	
Display style	Distribution full
Upper layer	
Lower layer	
Display label	
Name	
Diameter+distance	

There are a number of view settings to change the visual representation of the reinforcement:



With 'Reinforcement drawing type' set to '3D' and 'Display style' set to 'Real positions' you can show the actual 3D position of the created reinforcement areas:



The above is also exportable to a 3D drawing (DWG, IFC etc.).

Example

Theoretical reinforcement

Finally, we are going to explain all of the above once again using a simple example. We start with a slab supported on 3 wall elements that has some surface load on it. Looking at the reinforcement design, we get the following values for the theoretical required reinforcement As,req,1- (reinforcement in the first LCS direction on the bottom of the slab):



You can access the template of the theoretical provided reinforcement of a member by using the action button 'Edit provided reinforcement template' below the result properties and selecting the member:



The above is only possible if 'Design of provided reinforcement' is enabled for this type of element in the concrete settings.

Member type	Plate, Shell(Plate)	<u> </u>	Longitudinal reinfo	rcement						
Cross-section	1	<u> </u>	Definition of Basic	By I	Diameter 💌					
Mode	Standard	×			Basic (As,bas)			Addition	nal (As,add)	
			Layer	Diameter	Spacing	As	Diameter	Spacing	Sort by	As
				[mm]	[mm]	[cm^2/m]	[mm]	[mm]		[cm^2/m]
			[1+]	8,0	150,00	3,35	12,0;16,0;20,	150,00	min Diameter	7,54 - 32,72
	∧ _Z		[2+]	8,0	150,00	3,35	12,0;16,0;20,	150,00	min Diameter	7,54 - 32,72
	/\~		[1-]	8,0	150,00	3,35	12,0;16,0;20,	150,00	min Diameter	7,54 - 32,72
			[2-]	8,0	150,00	3,35	12,0;16,0;20,	150,00	min Diameter	7,54 - 32,72
(+) (-) X		(2) 0 0 0 0 0 y							OK	Cancel
									UK	Cancer

We can now define in the template what kind of reinforcement we want to provide for the reinforcement design:

This means that in the provided reinforcement we always have basic reinforcement bars – on the upper and lower edge – of diameter 8mm each 150mm. In practice this would probably be the basic reinforcement net. This can be increased with the values of the additional reinforcement we provided. However, the additional reinforcement will only be added if the provided reinforcement is less than the required reinforcement. This comparison will be done for each mesh element of the 2D element.

Now we can check what was the outcome of these comparisons by changing the result type to 'Provided & User':





If the internal forces would become so large that no reinforcement option (basic plus additional) you provided in the template can take up for these forces, you will see this in the result legend of the reinforcement design:

For the red area in this case a reinforcement of 8mm-150mm plus 25mm-150mm is not sufficient, but Scia will look no further because this was the maximum setting in the template.

If in the result properties you change 'Output' to 'Detailed' and click on 'Report preview' at the bottom of the result properties you can check all the details of the calculation:

Reinforcement design (ULS+SLS)

Linear calculation Combination: ULS-Set B (auto) Extreme: Member Selection: Named selection - Slabs Location: In nodes avg. on macro. System: LCS mesh element

Plate Slab	1		h=250	h=250 mm							
EC EN 1992-1-1:2004	/AC:2008		Node 13	Node 139/435 [X= 5,647, Y=3,000, Z=0,000 m]							
Design assumption Reinforcement Longitudinal: B500 Uppersurface [1+] Firstlayer ([2+] Second laye Cover: Lower surface [1-] Firstlayer (C [2-] Second laye Cover: Shear: B500B	DB 0°) & er (90°) & c 0°) & c c c c c c c c c c c c c	ð10,0 mm / F ð10,0 mm / F _{nem} = 30 mm ð10,0 mm / F _{nem} = 30 mm ð8 mm	Principal Principal Principal Principal	4 250 H	35° / 081 / 35°		[2+] Ø10 [1+] Ø10 [2-] Ø10 ([1-] Ø10 (90°) 90°) 99			
Structural class: Environmental cond Minimum cover c _{min} = max (c _{min} ,	S3 (itions : XC3 b;c _{min,dur} + Δc _{di}	design work (in situ) _{ur,γ} – Δc _{dur,st} -	ing life of 50 - Δc _{dur,add} ;10) years, no s	pecial qualit	y control)		(Table 4.3N (Table 4.1N (§4.4.1.2 (4.2			
= max (10;2 Nominal cover c _{nom} = c _{min} + Δc	0 + 0 - 0 - 0;1 _{dev} = 20 + 10 =	0)= 20 mm 30 mm						(§4.4.1.1 (4.1			
ternal forces from ltimate limit state Involving the shifting o $a_l = h \cdot Coeff_d =$	n structura f moment cur 0.25 · 0.9 = 225	a l analysi: ve : YES 5 mm	5					(§9.2.1.3(2 (§6.2.2(5			
Case	m _x [kNm/m]	m _y [kNm/m]	m _≫ [kNm/m]	n _× [kN/m]	n _y [kN/m]	n _{xy} [kN/m]	v _x [kN/m]	v _y [kN/m]			
ULS-Set B (auto)/1	73,85	2,23	-2,04	- 1,56	0,07	-0,02	24,57	-3,93			
ULS-Set B (auto)/2	54,71	1,65	-1,51	-1,15	0,06	-0,01	18,20	-2,9			
Case	Combina	tion key									
ULS-Set B (auto)/1	1.35*LC1+	1.35*P									
ULS-Set B (auto)/2	LC1+P										

Note that the calculation is always done for one specific mesh node (depending on the 'extreme' setting in the result properties), in this case node 139/435 on global location 5,5647 ; 3,0 ; 0,0.

Theoretical calculation of reinforcement uses the diameter that was chosen in the concrete setup, 10mm in this case, so this is not equal to the diameters we chose in the template for provided reinforcement. Afterwards we are going to compare this theoretical result with the template to decide a diameter and spacing of reinforcement:

[1-] φ8,0/150 + φ12,0/150

[2-] \$\$,0/150

Longitudinal reinforcement - Summary

Desig	Designed reinforcement layers (in direction from the member local x axis):												
	Basic	Add	itional	α	Asmin	A _{sut}	ΔA _{s,serv}	A _{s,req}	Asprov	A _{s,max}	Smin(cl)	Smax	Status
		User	Auto	[°]	[mm ²]	[mm ²]	[mm ²]	[mm ²]	[mm ²]	[mm ²]	[mm]	[mm]	
[1-]	φ8,0/150		φ12,0/150	0,0	324	846		846	1089	10000	70	75	OK
								0,34%	0,44%		≥37	≤400	
[2-]	φ8,0/150			90,0	309	50		309	335	10000	142	150	OK
								0,12%	0,13%	1	≥37	≤400	1

 A_{xreq} - required reinforcement area as max($A_{xult} A_{xmin}$) + ΔA_{xserv} ; A_{xprov} - provided reinforcement area; $A_{xmin/max}$ - min/max reinforcement area; $S_{max(min)}$ - maximum spacing of bars (minimum clear distance between bars



Practical reinforcement

Unlike for 1D members, for 2D elements practical reinforcement always has to be defined manually.

Input practical reinforcement

Type '2D reinforcement' in the spotlight or search for the functionality in the input panel or the process



After we selected the 2D member (the slab in our case) on which we want to apply this reinforcement we need to provide the reinforcement details for the area of reinforcement we are going to create:



MJ - 16/07/2024

Then you can draw an area in which you want this reinforcement to be taken into account. For this example we define the above reinforcement on the largest span of the slab:





Then we create a second area with the below settings on a smaller part of the largest span:



Let's have a look at the reinforcement design to see what effect this had, to consider user reinforcement don't forget to enable this in the result properties:



As you can see for the largest span the reinforcement we created is taken into account in addition to the basic reinforcement from the template while on the shortest span the basic reinforcement from the provided template is still present because there is no user reinforcement defined here.

Finally we can use the 3 types of reinforcement we discussed in this manual to perform the 2D reinforcement checks (crack width, punching check, code dependant deflections etc.) by choosing one of them in the result properties of a certain check:

 RESULT CASE 	
Type of load	Combinations \checkmark
Combination	SLS-Char (auto) 🗸
Envelope (for 2D drawing)	Absolute extreme $ \smallsetminus $
Type of reinforcement	Required 🗸 🗸
RESULT CASE FOR REQUIRED REPORTED RE	Required
Type of load	Provided
.,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	User
Class	All ULS+SLS V